

Replacement Filters



Set of five replacement 40 micron inlet filters

Order No. **VF-40M-5**



Virtual Industries, Inc.
2130 Victor Place
Colorado Springs, CO 80915
U.S.A.

www.virtual-ii.com
info@virtual-ii.com
Phone: 719-572-5566
FAX: 719-572-5504

8:00 A.M. to 4:30 P.M. Mountain Standard Time



8/10/22

OPERATING INSTRUCTIONS AND SPECIFICATIONS

ADJUST-A-VAC™ AV-6000

Vacuum Tweezer – ESD Safe
Cleanroom Safe and Class 10

Model No. AV-6000-110
Model No. AV-6000-220




Operation of the ADJUST-A-VAC™ AV-6000

1. Insure that the replaceable filter housing has a filter installed and is snugly tightened to insure no vacuum leaks. Turning clockwise tightens. Connect one end of the vacuum hose to the barb fitting on the filter housing and the other end to the barb on the vacuum pen that has the push button.



2. Select a probe with a vacuum cup that is slightly smaller in diameter to the outline of the parts that you want to pick and place. Securely install it on the tapered end of the vacuum pen tip. Selecting a vacuum cup that is too large or too small will result in improper operation.

3. Connect the 3 wire ADJUST-A-VAC™ AV-6000 power cord to input power. Turn the ON/OFF switch to the ON position. The LED vacuum level bar will glow at low brightness to show that power is on. To set the vacuum level for the parts you will be handling: First rotate the VACUUM ADJUST knob fully counter-clockwise to set the vacuum to the minimum level. Secondly place the pick-up tip flat on the part that you want to pick up. If the part is not grasped then rotate the VACUUM ADJUST knob clockwise until the part is grasped sufficiently for handling. The display bars will light up brightly to show the level of vacuum that is present. Push the vacuum release button on vacuum handle to release the part. When using small part tips several of the bars may illuminate brightly due to the tiny orifice of the tip being used.

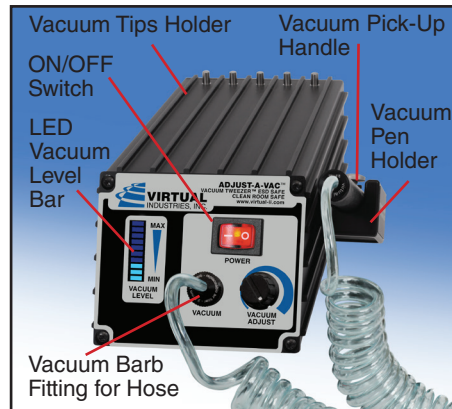

4. To pick and place a part: Gently place the vacuum cup on the top of the part that you wish to pick up. The part should now be firmly grasped by the vacuum cup. The blue LED vacuum level bars will light up brightly to show the level of vacuum that is present.



5. Now move the part to where you want to use it. To release the part simply depress the button with your finger, the part should now be released and the blue LED vacuum level bars will indicate the reduced vacuum level.

NOTE: When using small parts tips a partial level of vacuum will be displayed when the tip is installed.

6. Remember to turn the unit OFF when you are finished.



Specifications of the ADJUST-A-VAC™ AV-6000

VACUUM:
Up to 8 inches of mercury at sea level.

DIMENSIONS:

LENGTH	HEIGHT	WIDTH
8" (203mm)	3" (76mm)	3.5" (89mm)

WEIGHT:
2.84 LBS. (1288.2 grams)

POWER REQUIREMENTS:

Model No. AV-6000-110	110 VOLTS A.C.	50/60 HERTZ	4 WATTS
Model No. AV-6000-220	220 VOLTS A.C.	50/60 HERTZ	4 WATTS

THIS KIT INCLUDES:

- 5 feet of 2.5mm clear coiled ESD Safe vacuum hose.
- A set of nine vacuum tips.
- Five vacuum tip holders on top of tool.
- A control knob to reduce vacuum level to pick up tip.
- A push button vacuum pen (VVP-200).
- Bar LED graph power-on and vacuum-level indicator.
- Rubber no-skid feet
- ESD ground connection is by three wire power cord.
- Produces vacuum of up to eight inches of mercury.

Hose color may vary. Vacuum hoses are available in straight or coiled custom lengths, please contact Virtual Industries to order (719) 572-5566. There are no returns or refunds on custom lengths.