

## Product Warranty

**Virtual Industries, Inc.**  
PRODUCT WARRANTY  
LIMITED 90 DAY WARRANTY

Above named company warrants to the original consumer purchaser that its PAC-VAC™ shall be free from defects in material and workmanship for a period of 90 days from the date of purchase. If a defect covered by this warranty occurs during the 90 day warranty period, return the unit to above named company for repair or replacement of the unit, at the option of the above named company. For the correct address and return authorization call:

**1-800-530-8377 or (719) 572-5566**

This warranty does not cover damage or malfunctions resulting from improper handling, accident, misuse, abuse, failure of electrical power, use with other products not manufactured by the above named company, damage while in transit for repairs, repairs attempted by any unauthorized person or agency, or any other reason not due to defects in materials or workmanship. This warranty is also void if the serial number has been altered, defaced or removed.

### UNIT SERIAL NUMBER \_\_\_\_\_

THE ABOVE WARRANTIES FOR GOODS ARE IN LIEU OF ALL WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ABOVE NAMED COMPANIES LIABILITY IS LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE UNIT IN ITS SOLE DISCRETION, AND IN NO EVENT SHALL INCLUDE CONSEQUENTIAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE PURCHASER, INCLUDING WITHOUT LIMITATION ANY DAMAGE TO PRODUCTS BEING HANDLED, EVEN IF THE ABOVE NAMED COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

THE ABOVE NAMED COMPANY shall have no obligation to enhance or update any unit once manufactured.

Some states do not allow limitations on how long any implied warranty lasts so the above limitations may not apply to you. Some states do not allow the exclusion or limitation or incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.



**Virtual Industries, Inc.**  
2130 Victor Place  
Colorado Springs, CO 80915  
U.S.A.

www.virtual-ii.com  
info@virtual-ii.com  
Phone: 719-572-5566  
FAX: 719-572-5504

8:00 A.M. to 4:30 P.M. Mountain Standard Time



8/10/22

## OPERATING INSTRUCTIONS AND SPECIFICATIONS

**PEN-VAC™**  
VACUUM TWEEZER  
ESD SAFE

Model No.  
V8901  
ALL SERIES



## Operation of the PEN-VAC™


Select a probe with a vacuum cup that is slightly smaller in diameter to the outline of the parts that you want to pick and place. Securely install it on the tapered end of the vacuum handle. Selecting a vacuum cup that is too large or too small will result in improper operation.

### To pick and place a part:

Place index finger on vacuum button and push in, hold this position and gently place the vacuum cup on top of the part that you wish to pick up, now release button, the part should now be firmly grasped by the vacuum cup.

Now move the part to where you want it.

To release the part simply push vacuum button in.

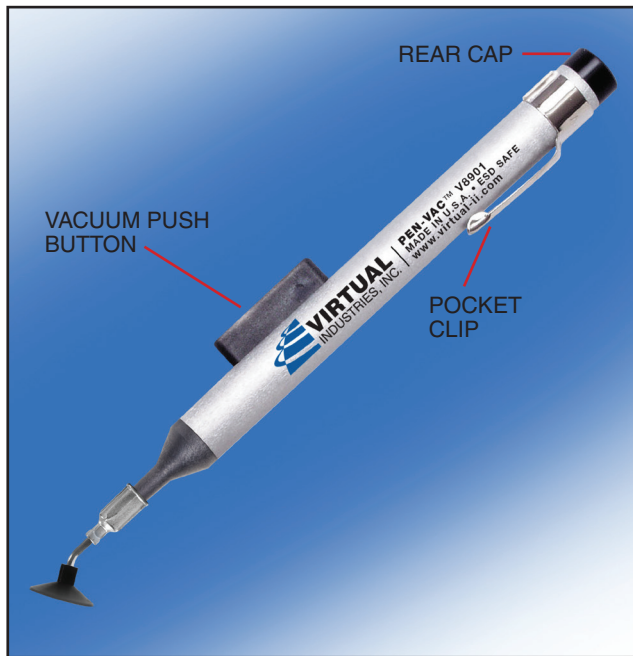

## Specifications

**ESD SAFE:**  
STATIC DISSIPATIVE PLASTIC NOZZLE

**DIMENSIONS:**  
LENGTH                      DIAMETER  
5.75" (146mm)              .50" (1.27mm)

**WEIGHT:**  
.060 OUNCES

**POWER REQUIREMENTS:**  
9 VOLT BATTERY

### PEN-VAC™ OPTIONS

#### SELECTION OF VACUUM CUPS WITH PROBES

The vacuum cups are a soft rubber material that allow handling a wide variety of small parts.

#### VACUUM PEN HOLDER VBM-3

Bench mount holder with posts to accommodate up to eight of our luer slip vacuum tips. The holder can be used to hold any of our vacuum handles or vacuum pens and helps protect the vacuum tips when not in use.



For technical assistance call toll free 1-800-590-5504

Tele: 719-572-5566

Fax: 719-572-5504

8:00 A.M. to 4:30 P.M. Mountain Standard Time